QUICK START GUIDE
INTUITA
HD8750/47

PLEASE NOTE: OUR MACHINES ARE TESTED WITH COFFEE AT THE FACTORY TO ENSURE HIGH QUALITY STANDARDS. WHILE MACHINES ARE CLEANED THOROUGHLY AFTER TESTING, IN SOME CASES, COFFEE GROUND MAY REMAIN IN THE MACHINE.

FOR FULL INSTRUCTIONS, PLEASE REFER TO THE USER MANUAL

SET UP

1.

Remove the water tank. Rinse tank with water and then fill with fresh water up to the MAX mark. Place water tank back into machine. To install water filter see user manual.

NOTE: Only use cool fresh water as any other liquid may cause damage.

2.

Remove the coffee bean hopper lid and slowly pour beans into hopper and replace lid.

NOTE: Only use coffee beans. Ground, instant and flavored coffees may damage the machine.

BEFORE FIRST USE

1. 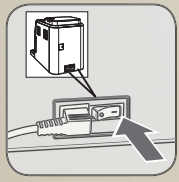

Switch power button on back of machine to the "I" or ON position.

PHILIPS

Saeco is a trademark of the Philips Group

2. Turn on the machine by pressing the "⏻" button on the control panel. Machine will heat up.

3. Once the machine turns on the "🚫" and "⚠" lights and the "☕" button will be flashing, indicating that a priming cycle must be started.

4.

Place a container under the steam wand then press the "☕" button to start the cycle. The machine will then start the automatic priming of the circuit by dispensing some water through the steam wand. When the process is completed the "☕" and "☕" buttons will flash and the machine will warm up automatically.

5. Once heated, a 1-minute rinse/self-cleaning cycle with fresh water will begin automatically. Place a container under dispensing spout to catch water.

6. Before using the machine for the first time a manual rinse cycle must be initialized. Place a container under the steam wand then press the hot water button. Do this until the "🚫" light is illuminated and then refill the water tank.

OPTIMIZE YOUR COFFEE

To optimize the extraction of coffee to the compactness of the ground coffee, brew 3-5 cups of espresso BEFORE drinking.

1. Fill the water tank again up to the MAX level indicator.
2. Place a cup under the dispensing spout and press the "☕" button to grind and dispense espresso.
3. Repeat Step 2 three-five times.
4. Your machine is now ready to brew coffee!

BREWING AN ESPRESSO USING WHOLE BEANS

1. 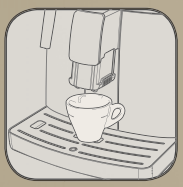

Place an espresso cup under the dispensing spout and adjust it accordingly.

2.

Turn the aroma knob to select your desired aroma/ strength then press the "☕" button to start brewing.

BREWING TWO ESPRESSOS USING WHOLE BEANS

1.

Place two espresso cups under the dispensing spout and adjust it accordingly.

2.

Turn the aroma knob to select your desired aroma/ strength then press the "☕" button twice consecutively. The "☕☕" light will turn on and the machine will begin brewing.

NOTE: Brewing two espressos requires two grinding and brewing cycles, automatically carried out by the machine.

HOW TO FROTH MILK USING THE STEAM WAND

1.

Fill a frothing pitcher 1/3 of the way with cold milk.

2.

Immerse the steam wand into the milk. Press the "♨" button to start dispensing steam.

3. Froth the milk by gently swirling the container and moving it up and down. When the milk froth has reached your desired consistency, press the "♨" button to stop steam dispensing and end the process.

4. After each use, clean the steam wand as described in the user manual.

CONTROL PANEL QUICK REFERENCE

Please refer to the control panel reference below for an understanding of functions

21. "No water" light
22. "Warning" light
23. "Double coffee" light
24. "No coffee" light
25. "Coffee grounds drawer" light
26. ON/OFF button
27. Hot water dispensing button
28. Espresso button
29. "Aroma" selector knob (strength)
30. Coffee brew button
31. Steam dispensing button
32. Descaling button

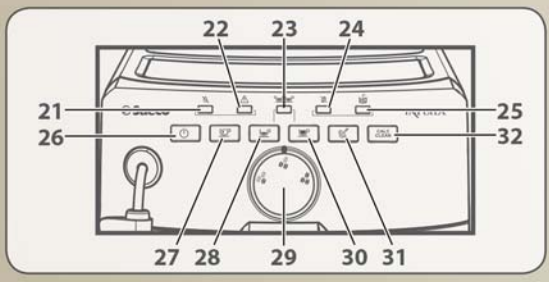

TROUBLE SHOOTING

Q: Why isn't my coffee hot enough?

A: Beverage temperature may be set to low in the programming menu. Go into the machine's settings and make sure it is set to Normal or High temperature.

A: Cup may be cold. Preheat cup with hot water before dispensing.

Q: Why is my coffee so weak?

A: The machine automatically adjusts itself after brewing a few cups of coffee to optimize the extraction of the coffee to the compactness of the ground coffee. We recommend brewing 3-5 espressos before drinking to allow for this adjustment process. Refer to the "*Saeco Adapting System*" in the user manual for more information.

A: The coffee may be too coarse. Change the coffee blend or adjust the grind. Finer coffee grounds result in stronger tasting coffee. Refer to the *"Adjusting the ceramic coffee grinder"* in the user manual for more information.

Q: Why is water/coffee leaking from machine?

A: Sometimes water is drained automatically by the machine into the drip tray to manage the rinsing of the circuits and ensure optimum machine performance.

A: The dispensing spout may be clogged. Clean the dispensing spout holes.

Q: Why isn't the machine filling up my cup?

A: The machine's coffee lengths can be programmed. For details on how to do this please refer to the user manual.

For more troubleshooting please refer to the User Manual.

NEED ASSISTANCE:

If you have any questions or concerns, we are always available to assist you. Please call us direct at 1-800-933-7876